



# LM – 150 IA User Manual



Zhuhai Line Magnetic Audio Co., Ltd.

TEL: 0756-8815707 E-MAIL : [market@lm-audio.com](mailto:market@lm-audio.com)

Address: No. 1201, Building #2, 300 Xinsha 3rd Road, Tangjiawan Town, Xiangzhou District, Zhuhai, Guangdong, China. 519085.

Thank you for choosing our products. Please read this manual carefully before using it.





Thanks for choosing our Line Magnetic product. Its implementation has been our know-how ,both in terms of design to the manufacturing . Electronic components and mechanical parts correspond to the selection criteria of very high quality.Op-eration and finish of each prouduct have been checked before delivery.To obtain best results,please read the advice contained in this document.

|                          |    |
|--------------------------|----|
| Table of Contents        | 01 |
| Package Contents         | 02 |
| Specifications           | 03 |
| Safety instructions      | 03 |
| Safety instructions      | 04 |
| Recommandations          | 04 |
| Recycling product        | 04 |
| Glossary                 | 05 |
| Location and precautions | 05 |
| Power sources            | 06 |
| Warranty                 | 06 |
| Functions descriptions   | 07 |
| Functions descriptions   | 08 |
| Functions descriptions   | 09 |
| Speaker connection       | 10 |
| Speaker connection       | 11 |
| Speaker connection       | 11 |
| Audio connection         | 11 |
| Audio connection         | 12 |
| Turning on               | 13 |
| General observations     | 13 |
| Remote control           | 13 |
| Tube replacement         | 14 |
| Troubleshooting          | 14 |
| Troubleshooting          | 15 |

Suggestions



LM-150 IA is designed and manufactured with our original partsand reaching the best results. We are not responsible for problems and damages caused by non-original parts replacement in the amplifier.

Package Contents

Please carefully check the package first and then open the package.  
Package contents include:

- 1. Line Magnetic LM-150 IA 1
- 2. Main Fuses 2
- 3. Remote control 1
- 4. User's Manual 1
- 5. Detachable power cord 1

Note: Please make sure local voltage level is matched with the input level of the amplifier which indicates on the rear panel. Too low or too high voltage may cause problem and in case you've found improper voltage please contact our company or our local agent (Tel: 0756-3911922).

Recommendation

Keep all packing materials for future use and please fill in the warranty card for registration of warranty.

All other parts except above are not included

Product features

- One hundred watts per channel, Class AB Integrated Stereo Amplifier with KT150 output power tubes, 12AX7, 12AU7 and 6SN7 input tubes. 12AX7, 12AU7 and 6SN7 are for three stages of signal amplification while KT150 for the power amplification.
- Well selected and matched tubes. Tubes we chose are Shuguang 12AX7, Shuguang 12AU7, Electro Harmonix 6SN7 and Tung-sol KT150. No matter it is the Pre-stage or power stage of tubes we select and choose the best matching ones to use on the same unit of amplifier to get the best sound quality out of it.
- Three pairs of inputs, One pair of Pre in and speaker terminals for 4 and 8 ohm speakers are located on the rear panel.
- Power tubes of KT150 can be replaced by KT120 so that you can enjoy a different sound.
- Different from other inputs Pre in offers you a possibility to connect to some other Preamplifier so that you can the LM-150 IA as a power amplifier.
- User bias control has been used for bias adjustment and two meters have been added to the front plate to allow you to monitor bias with ease. Bias meter here on LM-150IA is not just a meter for monitoring the bias but also a power level meter when switched to Meter by the selector on the front. It moves when music is on. Two separate meters for the Left and Right Channel have been build for monitoring.

Trouble shooting

| Problem                            | Cause                                                                          | Solution                                                                                                                |
|------------------------------------|--------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| Power LED is OFF.                  | Power cord is not well-connected.                                              | Please check the power cable connection or power outlet connection.                                                     |
|                                    | Main fuse is out.                                                              | Replace with the same type and value fuse.                                                                              |
|                                    | Troubles of inner parts or components.                                         | Please contact your local dealer.                                                                                       |
| Power LED is ON.                   | Volume is at zero.                                                             | Turn up the Volume.                                                                                                     |
|                                    | No signal input.                                                               | Check the function of the sound source.                                                                                 |
|                                    |                                                                                | Check the input connectors and/or switch to proper input                                                                |
| Sound distortion.                  | High input signal level.                                                       | Turn down the volume to suitable position.                                                                              |
|                                    |                                                                                | Replace the signal input cable.                                                                                         |
| Noise output.                      | Ground of input signal cable is open or bad contact of the input signal cable. | Replace the input signal cable with a new one.                                                                          |
|                                    | Components or circuits are in trouble.                                         | Please contact your local dealer.                                                                                       |
| Stereo image is not so good.       | Signal input cables or speaker cables are wrongly connected.                   | Reconnect it as suggested in the manual.                                                                                |
| No reaction to the remote control. | Disturbed by external devices.                                                 | Keep away from the disturbance (ie: microwave oven) and restart the amplifier.                                          |
|                                    | Batteries of the remote control are low.                                       | Please replace the batteries.                                                                                           |
|                                    | Obstacle is located between the remote control and the amplifier.              | Move the object that blocks the IR rays between the remote control and the IR sensor located on front of the amplifier. |

Note

 
The LM-150 IA has been designed and manufactured with parts that we manufacture to achieve an optimal result. We disclaim liability for potential problems or damage to the amplifier in the event of replacement of any of these original parts.

We are not responsible for any problems caused by checking and opening without permission of our company. For service, please contact a qualified service technician.

Tube replacement

| Basics tubes | Common replacements                         |
|--------------|---------------------------------------------|
| 12AX7        | 12AX7EH, ECC83, E83CC, CV4004, ECC803, 5751 |
| 12AU7        | 12AU7EH, ECC82, 5814, 6189, CV4003          |
| 6SN7EH       | 6N8P, 6H8M, 6H8C, 6F8G, CV181, QB65, ECC32  |
| KT150        | KT120                                       |

Tube replacement

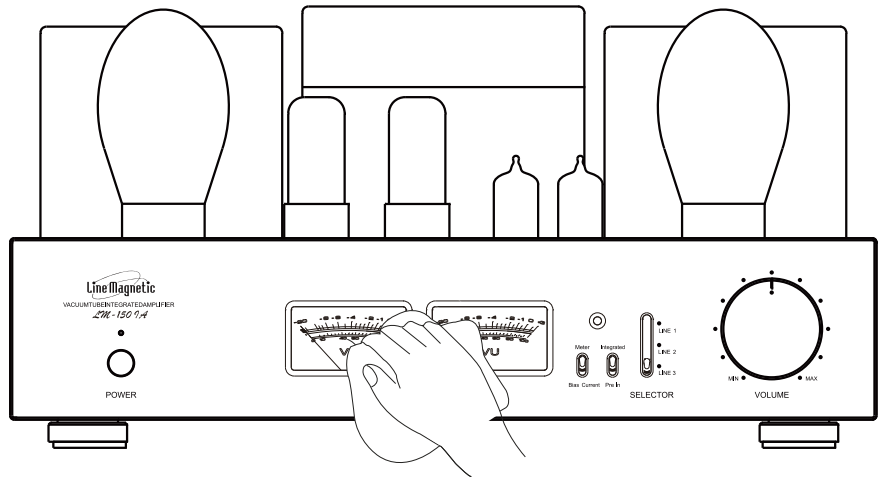

WARNING

As a precaution, it is best to unplug the unit before handling and ensure the heat generated by the product has been properly dissipated.

Cleaning

1. Use soft dry cloth to clean the amplifier.
2. Refer to the safety precautions if you are going to use chemically treated cloth for cleaning.
3. Use a soft cloth with neutral detergent first and then wipe with a dry cloth.

Trouble shooting

Please follow the instructions in this manual to keep the amplifier working in a reliable and safe manner. Sometimes problems could be caused by other related equipment, please check the connections.

If you experience a problem with this unit, please check the following items before requesting service. If it still does not operate correctly, contact the retailer where you purchased the unit.

For repair, during or after the warranty, please contact your local dealer.

Product features

- Specially designed Toroid transformers made of Z11 Core for power supply and two Japanese Audio grade EI types of output transformers with wide bandwidth are applied. All transformers and chokes are encapsulated and installed separately on the amplifier to avoid and lower the disturbance between each other.
- Japanese ALPS volume potentiometer, American MIT and German Micap coupling capacitors etc Audio grade components have been applied.
- RCA terminals are specially designed by Line Magnetic for the amplifier. It can reduce the signal loss during transition and guarantee the sound quality.
- Standard with remote control.
- Hand made construction with the finest point-to-point wiring.
- Soft-start and time-delay circuit. (30 seconds).

Specification

|                                                                  |                                                                           |
|------------------------------------------------------------------|---------------------------------------------------------------------------|
| Power output: 100W+100W                                          | Working conditions:<br>Temperature: 0°C to 40°C<br>Moisture: 20% to 80%   |
| Frequency response (-1,5dB): 10Hz-60Hz                           | Storage conditions:<br>Temperature: -20°C to 70°C<br>Moisture: 20% to 90% |
| Input sensitivity: Line: 200mV Pre in: 1000mV                    | THD: 1%<br>S/N ratio: 87dB                                                |
| Dimensions (W x H x D): 430 x 230 x 355mm                        | Input impedance: 100kΩ<br>Output impedance: 4Ω, 8Ω, 16Ω                   |
| Tubes: 2 x 12AX7, 2 x 12AU7, 4 x KT150, 6SN7EH x 2               | Net weight: 32kg                                                          |
| Power requirements: 115V/120V/220V/230V/240V<br>± 5% (50Hz/60Hz) | Power consumption: 480W                                                   |

Safety instructions

We invite you to read the instructions on the proper use of your product carefully. They of the latter and it safely.

- Do not use this device in a wet area, near water, do not expose to rain or moisture.
- Do not place any objects filled with liquids such as vases or some others on the top or around.
- Do not move the product if it has just been used or if it is still hot.

### Safety instructions

- Clean only with a dry cloth. As a precaution, it is best to unplug the unit before handling by the product has been properly dissipated.
- Never cover the ventilation of the unit.
- Amplifier should install steadily and make sure all four feet are on the same level.
- Keep the amplifier in 15 cm's distance to the surrounding walls.
- Temperature will become higher after working in long period of time and please keep the unit's ventilation open and install the amplifier at a well-ventilated place to avoid trouble and fire hazard.
- Please move the amplifier carefully not to drop the unit or be subject to other strong shocks.
- Unplug the power cord if you are not going to use the product for an extended period of time or during lightning storms.
- Take great care of electrical connections (power cord and plus). In particular, do not specifically at plugs, power plant and the output of the power supply.
- Be sure to use an appropriate power supply to the power jack on the unit outlet. Especially with a ground plug, it is necessary to use it.
- Forbidden to operate as unloaded.
- Use only spare parts and accessories recommended by Line Magnetic.
- We are not responsible for any problems caused by checking and opening without permission of our company.
- For service, please contact a local dealer or qualified service technician

### Recommendations

Input voltage level of the amplifier is 115V/120V/220V/230V/240VAC  $\pm 5\%$  and please make sure that your local voltage is the same as indicated on the rear panel. A too low or too high voltage can cause serious damage to your amplifier. In case you find an improper voltage, please contact our company or your local dealer.

With headphones, do not use it to excessive noise. Otherwise, prolonged listening at high volume levels may cause permanent damage to your hearing.

When disposing of used batteries, please comply with governmental regulations rules defined by the public statements relating to the environment applicable in your country. Never expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire, etc...

### Recycling product

At the end of its useful life, this product should not be disposed of with regular garbage, but returned to a collection point for the recycling of electrical and electronic components. This point is emphasized by the symbol on the product, instruction manual and on the packaging.

The materials can be reused in accordance with their markings. Through reuse and recycling of raw materials or other form of recycling, you make an important contribution to environmental protection. Your municipality can tell where is the point of the nearest collection site.

 
### General observations

- Line Magnetic Audio reserves the right to change specifications at any time without further notice in advance if products are upgraded. Specifications on the manual only show the specifications of the amplifier you've bought. responsible for damage caused by misuse of unsuitable voltage.

**WARNING :** Please make sure corresponding voltage is the same as required. We are not responsible for damage caused by misuse of unsuitable voltage.

### Remote control

The amplifier comes with LM-02 remote control.

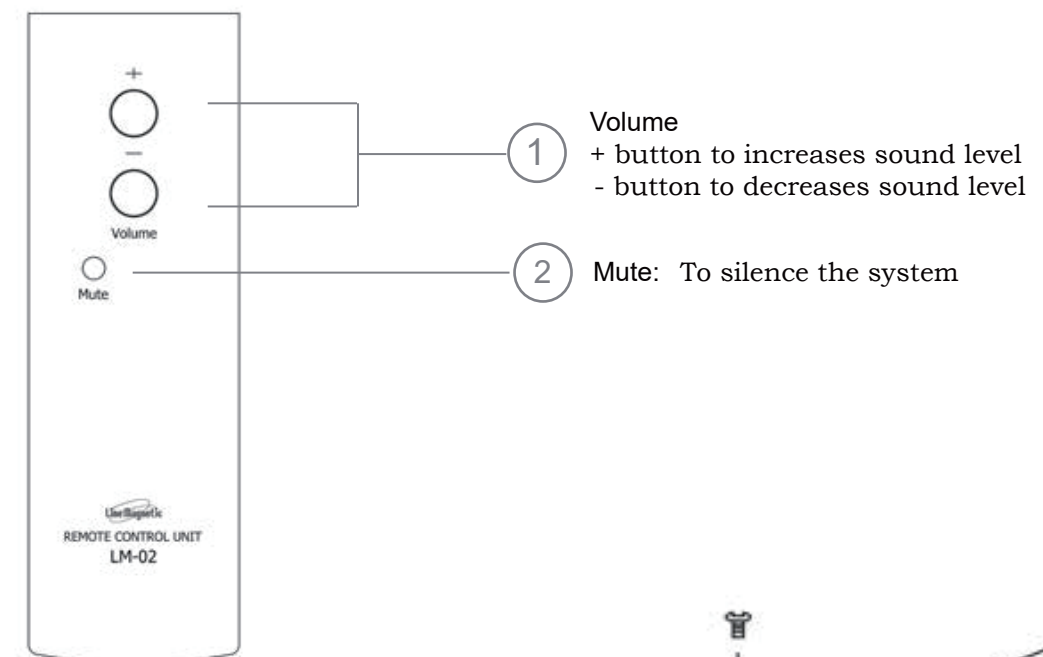


### Installation and replacement of the batteries


#### Installation

1. Remove the screws of the remote's back cover.
2. Insert two 1.5V AAA batteries using the + and indicators insert them in the correct position.
3. Screw the battery cover back into place.

#### Replacement of the batteries

  - When the batteries are low, please replace them ones.
- Do not mix the new batteries with old ones. Please use high quality batteries, there can prevent - of electrolyte.

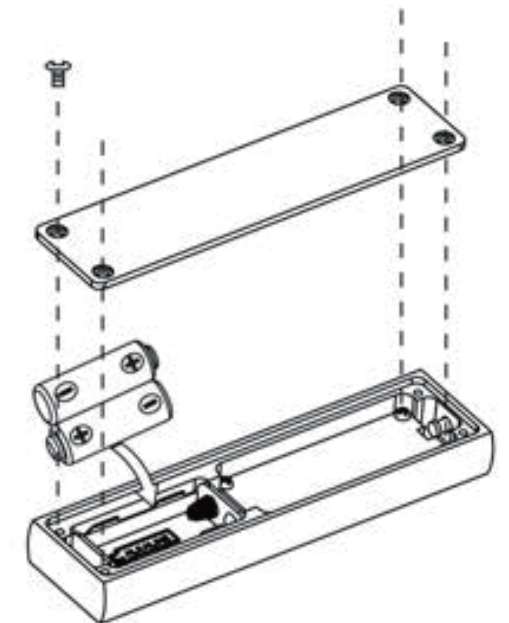

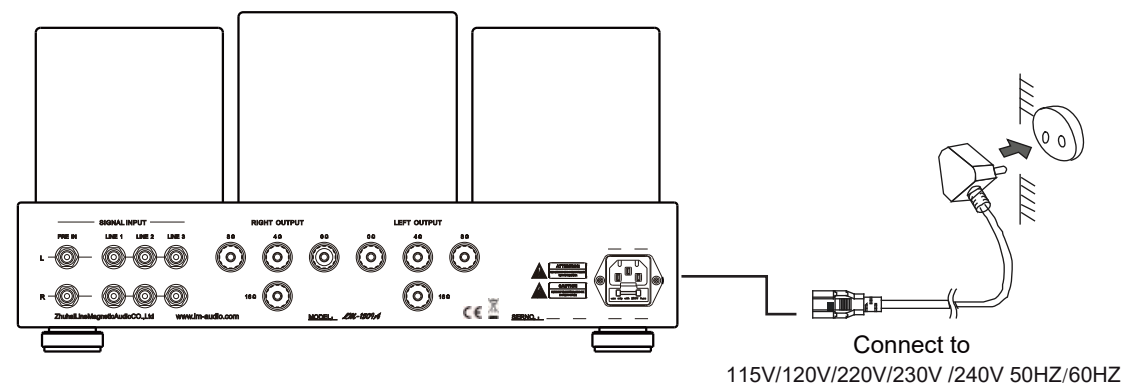

Connection of the power cord  
Connect the speaker cables and signal cables first and then plug the power cord into the power socket. Your amplifier is now ready for operation.

## Turning on



### IMPORTANT - BEFORE TURNING ON THE AMPLIFIER

Make sure all connections (first, connect the speaker cables, then the cables from your sources, and plug the power cable into the AC outlet) are valid, and the stability of your power supply AC 115V/120V/220V/230V/ 240V- 50HZ/60HZ.

Please make sure corresponding voltage is the same as required. We are not responsible for damage caused by misuse of unsuitable voltage.

- 1.-Set the VOLUME of the amplifier to zero (potentiometer totally on the left).
- 2.-Switch the amplifier to ON position via the POWER button located on the front of the amplifier.
- 3.-After 30 seconds, the orange led blinking will stabilize to indicate that the amplifier is ready for use.
- 4- Select the source you want to listen to with the SELECTOR button located to the right of the front panel.
- 5- Adjust the VOLUME knob as you like to enjoy your music.

### General observations



- It is normal that power transformer becomes hot for extended period of operation.
- Unplug the product during lightning storms or when not in use for a long time.
- In order to protect the tubes please re-switch on the amplifier after turned off in two minutes.
- This product is designed and manufactured with our original parts for reaching the best results. We are not responsible for problems and damages caused to the amplifier by non-original replacement parts.



This symbol alerts the user to the presence of «dangerous voltage» uninsulated which may pose a risk of electric shock to the user.



This symbol alerts the user that the documentation that comes with the device contains important instructions for maintenance and proper use of the product.



The CE mark indicates that this product complies with European directives called «low voltage» (2006/95/EC) ,Electromagnetic Compatibility (2004/108/EC) and apply eco-design requirements for energy products (2009/95/EC) when the appliance is installed and used in accordance with the user manual.

For continued compliance only Line Magnetic accessories must be used with \ product and servicing must be performed by specialized and qualified staff.



The WEEE symbol is that of the European Union regarding the recycling of electrical and electronic equipment. It indicates that this product contains electrical and electronic components that can be reused, recycled or recovered. Therefore this product should not be disposed of in your regular trash. Thank you return the unit or contact your authorized dealer for more information.

## Location and precautions



Avoid placing it in direct sunlight or near heat source .No source of light shall be placed on the apparatus. Also avoid all sources that could cause vibration, dust, cold or moisture. The recommended ambient temperature range is 5-35 C.

The device must be installed on a stable, level surface. Do not place the unit on an unstable surface or shelf. The unit may fall, causing serious injury to a child or adult as well as serious damage to the product. Do not place other equipment on top of the unit.

Due to stray, turntables or CRT TVs magnetic fields should not be located near the unit to avoid possible interference.

## Power sources



The unit should be operated only from the type of power source indicated on the label . If you are unsure of the type power available to you, thank you to contact your dealer or the company responsible for the power supply in your area.

Turn off device if you do not intend to use this unit for a long time.

In case of prolonged absence from home, it is recommended to unplug from the electrical outlet.

Make sure each cable is correctly inserted. To prevent hum or background noise, do not mix different other antenna cable with the power cord or speaker wires.

## Warranty

Keep all packing materials for future use and please fill in the warranty card for registration of warranty.

Your Line Magnetic product is covered by the legal warranty in force in your country. You may also have other rights which vary from country to country, state to state.

 
In addition, you benefit a commercial guarantee offered by BC Diffusion on the products Line Magnetic.

For details on this warranty, please refer to the information available on [www.line-magnetic.eu](http://www.line-magnetic.eu).


## Functions descriptions

Input voltage level of the amplifier is ~115V/120V/220V/230V/240VAC ±5% and please, make sure that your local voltage is the same as indicated on the rear panel. A too low or too high voltage can cause serious damage to your CD Player. In case you find an improper voltage, please contact our company responsible for the power supply or your local dealer.

### Front panel

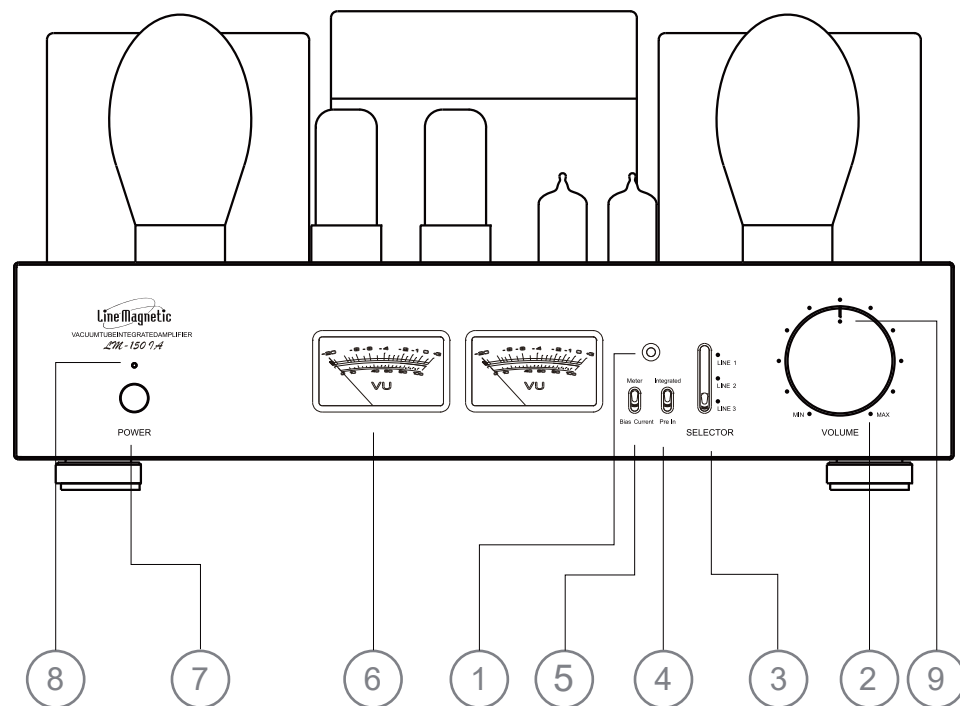

## Speaker connection

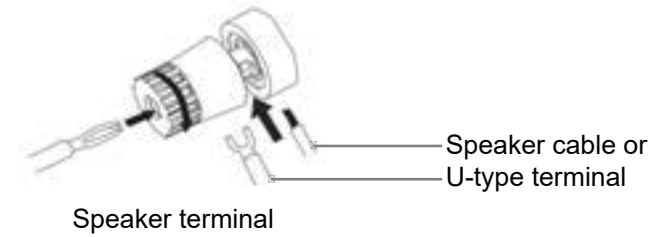 


Make sure that no wires are not insulated can bypass the speaker outputs. Make sure that the speaker terminals are tight enough to ensure a good electrical connection. If the terminal screws are not tight enough, the sound quality may be affected.

Use only dedicated wire to the speaker (a section of 1.5 mm<sup>2</sup> or more is recommended especially if the cable length greater than 3m).

## Audio connection

 Connect other audio equipment to your amplifier

Use a RCA (Cinch) stereo audio cable (red and white plugs) to connect your sources.

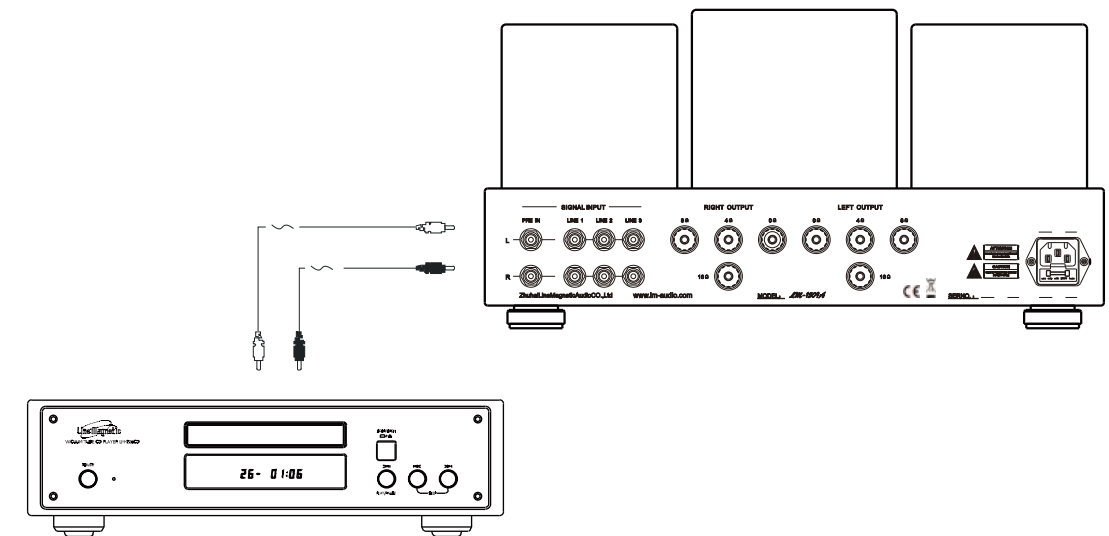


- 1- During installation please always refer to other product's operation manuals.
  - 2- Please do not insert the power cord into the main socket only if all other sources are well connected.
  - 3- «R» refers to the Right channel while «L» represents the Left channel.
  - 4- Please take the right guidance for connection as wrong connection may cause noise or low grade function.
- Do not also fasten signal cables together with other cables just like the power cables to avoid disturbance.

## Speaker connection

 **WARNING:** Make sure that the device is not the mains before making any connections. It is also recommended to turn off or disconnect all other devices associated while making connections to the product.

Never operate the amplifier without having first connect the loudspeakers. The principle of operation amplifier tube is different from transistor amplifier; without «charges» energy amplifier is dissipated in transformers out what is harmful for the durability of the product.

Check the impedance of your speakers. When using a pair of speakers, you can use speakers with an impedance of between 4 , 8 and 16 ohms. BE SURE THE MATCHCHING THERMINALS.

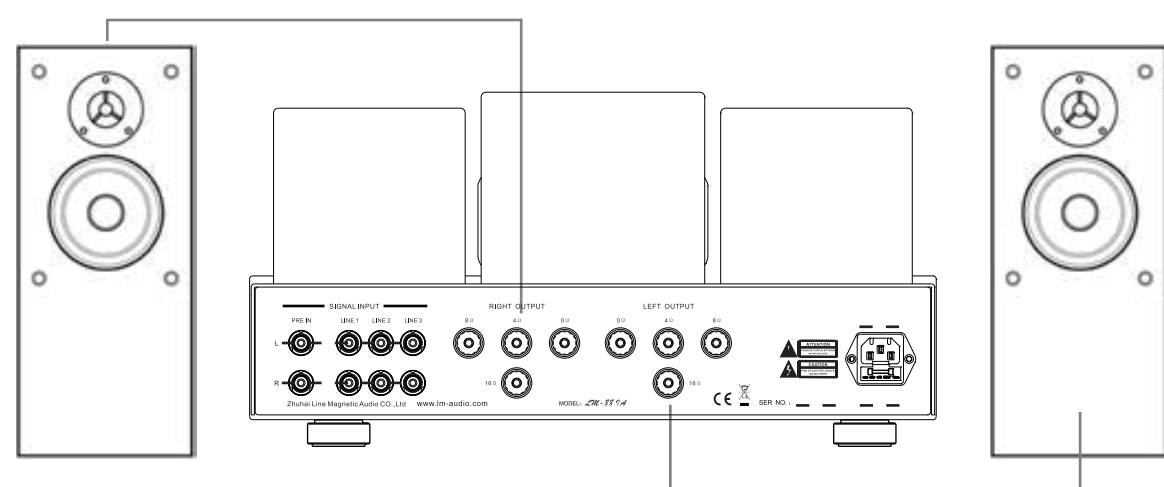

Connect your speakers to the amplifier

- 1- Unscrew the terminal by hand.
- 2- Insert the loudspeaker cable (refer to the diagram below).
- 3- Screw the terminal.
- 4- Repeat the same operation for the other 3 terminals.


- Connect the speaker cables with the amplifier after it is well connected with the speakers.

Please notice the right direction indication of the cable and do not mix up the positive and the egative end.

## Functions descriptions

 - ① IR remote sensor: React according to the orders of the remote. It is essential that there are no obstacles between the remote control and the sensor.
- ② Volume knob: This volume knob adjusts the output volume of the amplifier sent to the loudspeaker. Volume up to the right while volume down to the left.
- ③ Selector: Source selection among LINE 1, LINE 2 and LINE 3 inputs.
- ④ Integrated/Pre in: Switch between Integrated and Pre in mode. If Pre in Selected the amplifier will work as a Power Amplifier.
- ⑤ Meter/Bias Current: Switch between power output and current of power tubes.
- ⑥ Ampere meter: Monitor the power output or current of power tubes.
- ⑦ Power: ON/OFF(Turn on or turn off the amplifier.)
- ⑧ Operation: Indicate the state of the amplifier. Orange means operation and if turning on it will twinkle for 30 seconds during the time delay.
- ⑨ Mute: If it is muted the indicator will twinkle .(Mute from remote control).

Rear panel

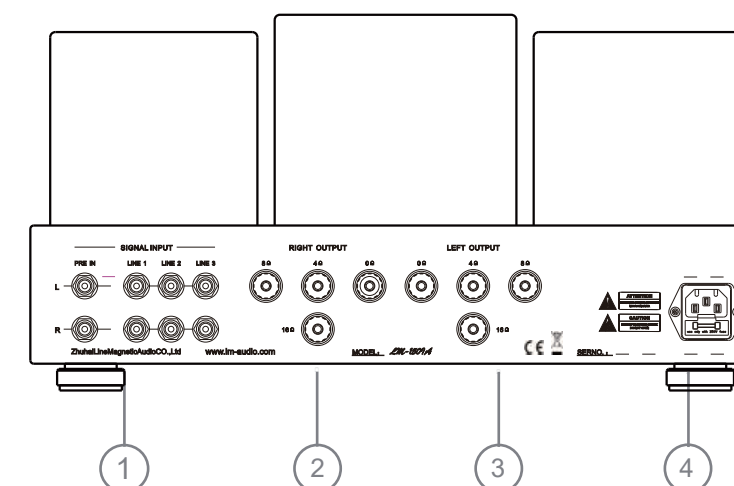

- ① Signal input: Inputs (RCA plugs) are for connecting a «digital» line level source to your amplifier. It is designed to receive an «analog» signal (as opposed to «digital» signal). To connect your source we are using a traditional «RCA» cable, they are usually identified by a color code «RED» to the RIGHT channel «WHITE» to the LEFT channel.
- ② Right output: Connect the speaker to the terminal marked RIGHT «+R» and «R-» ensuring that «R+» is connected to the «+» terminal of the enclosure and «R -» is connected to the terminal «-» the same enclosure.
- ③ Left output: Connect the LEFT speaker to the terminals marked «L+» and «L-» by doing the same.

**Important Note:** Check the impedance of your speakers. When using a pair of speakers, you can use speakers with an impedance of between 4 and 8 ohms. BE SURE THE MATCHCHING THERMINALS.

- ④ Power Socket with main fuse. Main fuse is located on the rear of the amplifier just below the power cord socket. Replace with the same type and value fuse.

Once all connections to the amplifier have been made, connect the power cable to an electrical outlet and turn on the unit as it is ready for operation.


### Top view

 V1,V2,V3 V4:  
KT150 tubes

V5, V6:  
6SN76EH tubes

V7:  
12AU7 tubes

V8 ,V9:  
12AX7 tube

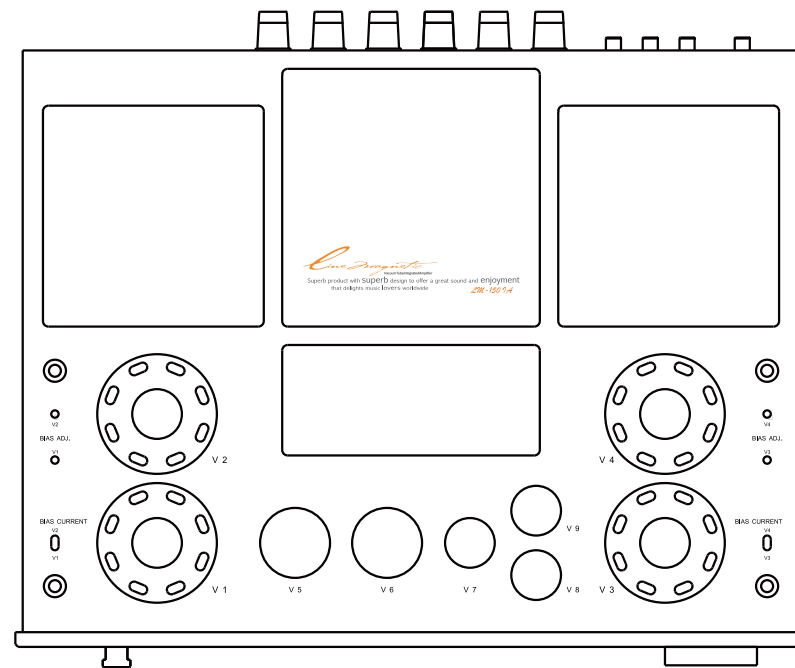

- ① BIAS ADJ.: Bias adjustment screws for tubes V1 and V2.
- ② BIAS ADJ.: Bias adjustment screws for tubes V3 and V4.
- ③ Bias Current: Allows to view the tube V1 bias level on the ampere meter when the small handle is down and when the handle is up, you can see the bias level on the ampere meter for the V2 tube.
- ④ Bias Current: Allows to view the tube V3 bias level on the ampere meter when the small handle is down and when the handle is up, you can see the bias level on the ampere meter for the V4 tube.

Ampere meter: Monitor the currency of the power tubes.

Bias adjustment for 150IA tubes.

Note: You do not need to perform the bias adjustment when using the amplifier for the first time. Turn on the amplifier and wait for about ten minutes.

 
WARNING : When making adjustments, be careful not to burn yourself with tubes that are very hot.

Select the tube you want to adjust (from V1 to V4), then position the Bias Current and adjust the tube bias with a small screwdriver. Make sure all the bias level of V1, V2, V3 and V4 are the same.

Inspect the ampere meter on the front panel and make sure the needle is in the area  $i_a=50\text{mA}$  (KT150) and  $i_a=40\text{mA}$  (KT120) shown on this diagram (below).

The current adjustment must be the same for the 4 tubes in order to obtain an optimal sound reproduction of the Amplifier.

If you have any questions, please contact a local maintenance service or your local dealer

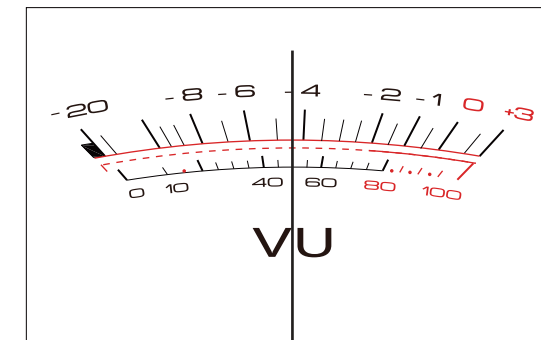

### Instructions on Fuse Replacement:

- ① You will find the Power socket with main fuse on the rear panel. Above is the picture for your reference. In the Power socket there is a fuse holder where is the fuse located.
- ② As for the fuse holder there is a groove on the top. Please use a screwdriver and put into the groove. Pull out the fuse holder following the direction as shown in above picture.
- ③ Take out the old fuse and replace with the same type and value of fuse.